DXI

MIDCO BUSINESS

# Flexible. Functional. User-friendly.

Yealink T54W & T57W Phones

# **Table of Contents**

2
3
4
5
5
7
8
9
10
11
11
12
13
14

# **Getting Started**

If your phone is plugged in and connected to the network, it's time to configure the functions and features to meet your needs. This guide will help you understand the basics. Ready, set, call!



See the full guide at:
Midco.com/Business/GettingStarted

# Place a Call

#### Using the handset:

- 1. Pick up the handset.
- 2. Dial the number, and then press Call.

#### Using the speakerphone:

- 1. With the handset on-hook, press (\*\*).
- 2. Dial the number, and then press Call.

## Using the headset:

- 1. With the headset connected, press (?) to activate the headset mode.
- 2. Dial the number, and then press Call.

During a call, you may alternate between the handset, speakerphone and headset modes. Simply press the **Headset** key, the **Speakerphone** key or pick up the handset. Headset mode requires a connected headset.

# Answer, Hold and Resume a Call

# To answer a call using the handset:

Pick up the handset to answer.

# To answer a call using the speakerphone:

Press (10) to answer.

### To answer a call using the headset:

With the headset connected, press (?) to answer.

#### To hold a call:

Press 🔥 or **Hold** during an active call.

#### To resume a call:

- For one call on hold, press 🕏 or **Resume**.
- For multiple calls on hold, press or to select the desired call, and then press
   or Resume.

# **CommPortal Login**

# To manage and use your business calling features using the Midco CommPortal:

- Go to the Midco CommPortal, at Commportal.Midco.com.
- On the login screen, enter your phone number and password. Your initial password is provided by Midco.
- 3. Click Login.
- 4. If you have not already, change your password to one that's unique to you.

For additional CommPortal instructions, visit **Midco.com/Business/GettingStarted**.

# **Speed Dial**

# To configure speed dial keys:

- Log in to the Midco CommPortal.
- On the Home dashboard, click Contacts and then Contact List.
- 3. Click Speed Dials.

- 4. In the **New Speed Dial** section, select a **speed dial code**.
  - One-digit codes range from 2-9. Two-digit codes range from 20-49.
  - Only unassigned speed dial codes will display as selection options.
- 5. Enter the **number** you'd like assigned to the speed dial code.
- 6. Click Add.
- 7. Repeat steps 3-5 for each new speed dial code you'd like to set up.
- 8. Click **Apply** when you have finished adding all new speed dial numbers.

You can now dial an established speed dial number from your phone. Simply lift your handset and listen for the dial tone. Dial the speed code for the party you'd like to call.

## To use speed dial:

Simply press the speed dial key to dial the present number based on your desired configuration.

# **Three-Way Call**

#### To initiate a three-way call:

- Press Conference during an active call.
   The call is placed on hold.
- 2. Dial the number of the second party, and then press **Call**.
- 3. Press **Conference** again when the second party answers. Three parties are now joined in the conference.

**Pro Tip:** You may split the conference call into two individual calls by pressing **Split**.

# Voicemail

#### To set up voicemail:

- Lift the handset and press the =Voicemail button.
- 2. Enter your default pin, followed by the # key.
- Follow the instructions to complete voicemail setup.

#### To listen to voicemail:

- Life the handset and press the Voicemail button.
- 2. Press or the voicemail line key.
- 3. Follow the voice prompts.

The power indicator LED will slowly flash red if you have one or more voicemail messages waiting at the message center. By default, unanswered calls will go to voicemail.

If you forget your voicemail PIN, contact your company's system administrator to have it reset.

# **Call Forwarding**

#### To enable call forward:

- Navigate to Menu > Features > Call Forward.
- 2. Select the desired forward type:
  - Always Forward: Forwards all incoming calls to a specified forward-to destination.
  - Busy Forward: Forwards calls when your line is busy.
  - No Answer Forward: Forwards calls when DND is enabled, or if you do not answer the call in a pre-selected amount of time.
- Dial the number you want to forward to.
   For No Answer Forward, press (1) to (2) select the desired ring time to wait before forwarding from the After Ring Time field.
- 4. Press **Save** to accept the change.

**Note:** When configuring the No Answer Forward, you can choose from 0-80 seconds for the ring time.

# **Transfers**

#### **Blind Transfer**

To perform a blind transfer:

- Press (-c) or Transfer during an active call.
   The call is placed on hold. Dial the number you want to transfer to.
- 2. Press (-c) or **B Transfer**.

#### Semi-Attended & Attended Transfer

To perform a semi-attended or attended transfer:

- Press (--) or Transfer during an active call.
   The call is placed on hold. Dial the number you want to transfer to, and then press Call.
- Press (-t) or **Transfer** when you hear the ringback tone or when the second party answers.

# **Call Parking**

#### To park a call:

- 1. While on an active call, select **Transfer**.
- Press Park 1 (or dial \*45) to park the line. If you already have a call parked in Park 1, use Park 2 or 3 and so on.
- 3. To retrieve a parked call, select the **parking spot**.

**Note:** Anyone at the office can retrieve a parked call from any phone.

# Do Not Disturb (DND)

## To send incoming calls to voicemail:

- 1. Press the **DND** softkey.
- The DND icon on the home screen will turn red to indicate unavailability.

To disable DND mode, press **Exit DND mode** on the home screen.

**Note:** During DND mode, callers will be sent to voicemail. Calls cannot be received until you disable DND mode.

# **Volume and Ringtones**

# To adjust the call volume:

Press ——— to adjust during an active call.

# To adjust the ringer volume:

Press - to while not on an active call.

# To set a ringtone:

- Navigate to
   Menu > Basic >Sound > Ringtones.
- Press or to select Common or the desired account and then press Enter.
- Press ♠ or ▼ to select the desired ringtone.
- 4. Press Save to accept the change.

# **Call History**

# To access and manage call history:

- 1. Press Call Logs or Menu > History.
- 2. Press or to select an entry from the list.
- 3. Do the following:
  - Press Call to call the entry.
  - Press (i) to do the following:
    - Select **Detail** to view detailed information about the entry.
    - Select Add to Contacts to add the entry to the local directory.

To block the caller or add it to your blacklist, log in to the **Midco CommPortal** and go to **Phone Status** > **Rules**.

# **Company Directory**

#### To add a contact:

- 1. Press **Directory**, and then **Network Contacts**.
- Select CommPortal Contacts. Press Add to add a contact.
- Enter a contact name in the Name field and contact number(s) in the corresponding field(s). Press Save to accept the change.

#### To edit a contact:

- 1. Press Directory, and then Network Contacts.
- Select CommPortal Contacts. Search for the desired contact, press i and then select Detail from the prompt list.
- 3. Edit the contact information. Press **Save** to accept the change.

#### To delete a contact:

- Press Directory, and then Network Contacts.
- Select CommPortal Contacts. Search for the desired contact, press i and then select Delete from the prompt list.
- 3. Press **OK** to delete the selected item.

**M** 

MIDCO BUSINESS

# Online Resources

We have online resources for all-things phone:

- Phone video tutorials
- CommPortal training videos
- More quick start guides
- EXP50 Expansion Module instructions



Access it all at:

Midco.com/Business/GettingStarted